# COOKTOP PARTS

**For Model: RF212PXSQ4**
**(Designer White)**

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE







| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Literature |
| | W10196159 | Instructions Installations Template, Anti−Tip |
| | 9757142 | English/Spanish |
| | 9757143 | English/French |
| | W10200356 | Owners Manual |
| | W10133888 | Tech Sheet |
| | 9762761 | Safer Cooking Tips |
| 2 | W10162042 | Spring, Element |
| 3 | 3196170 | Screw |
| 4 | | Cooktop |
| | W10162021 | White/White |
| 5 | | Element, Surface |
| | 8523695 | 2000 W − LF |
| | 8523697 | 1500 W − LR |
| | 8523695 | 2000 W − RR |
| | 8523697 | 1500 W − RF |
| 7 | 3195060 | Pin, Hinge |
| 8 | W10170526 | Pan, Element |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

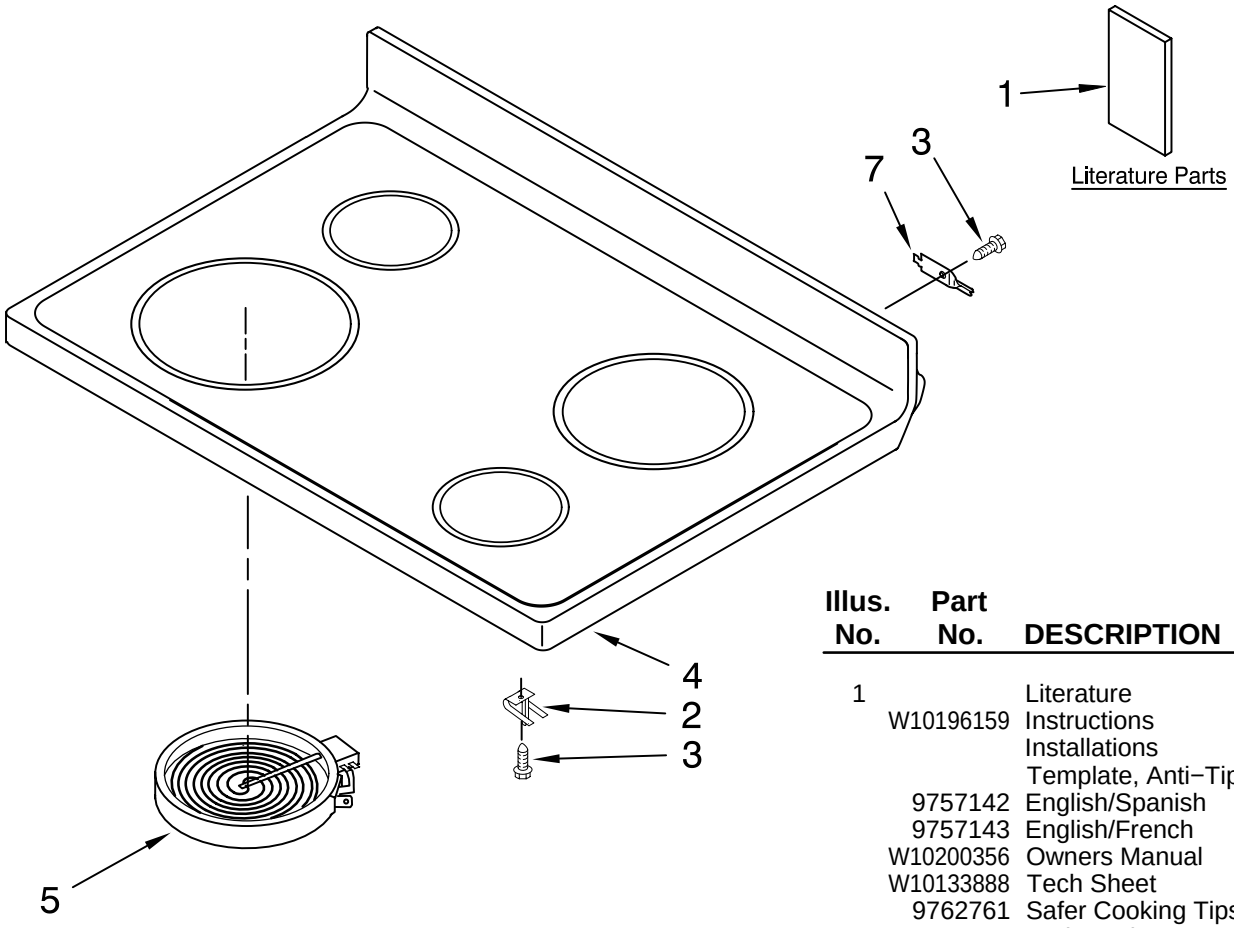**For Model: RF212PXSQ4**
**(Designer White)**

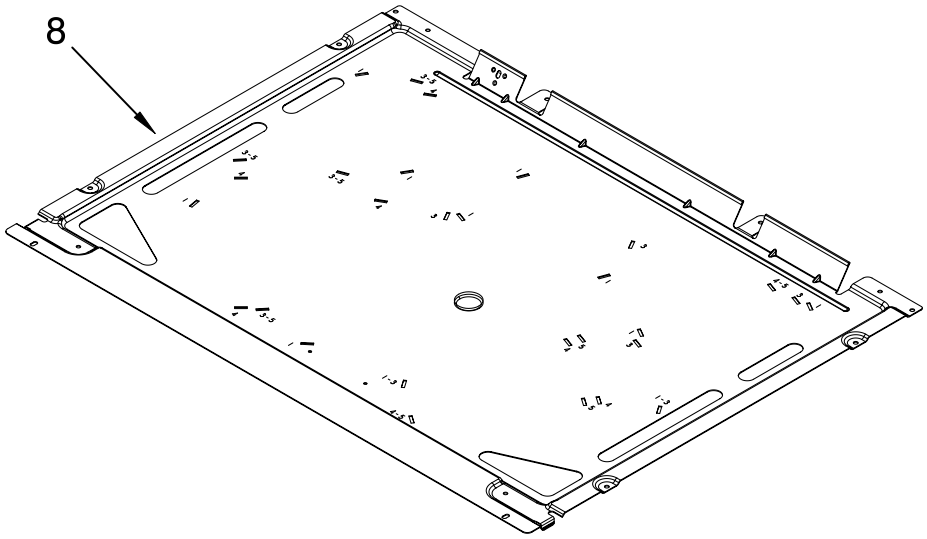


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Endcap |
| | W10009040 | White Left Hand |
| | W10009050 | White Right Hand |
| 2 | 9757609 | Nameplate |
| 3 | | Panel, Console |
| | W10170632 | White |
| 4 | | Switch, Infinite |
| | 3148953 | Left Front |
| | 3148952 | Left Rear |
| | 3148953 | Right Rear |
| | 3148952 | Right Front |
| 6 | 3196068 | Lens, Light (3) |
| 7 | | Knob, Infinite (4) |
| | 9761962 | White |
| 8 | W10134247 | Shield, Heat |
| 9 | 3196166 | Screw |
| 10 | 8272473 | Cover, Upper |
| 11 | 8273564 | Clip |
| 12 | | Control, Range |
| | W10173592 | White |
| 13 | 3196178 | Screw |
| 14 | 9762078 | Brkt−Mntg, EOC |
| 15 | W10182322 | Brkt−Mntg, Console |
| 16 | 3400882 | Screw |
| 17 | 3196200 | Clip, Spring |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

**For Model: RF212PXSQ4**
**(Designer White)**

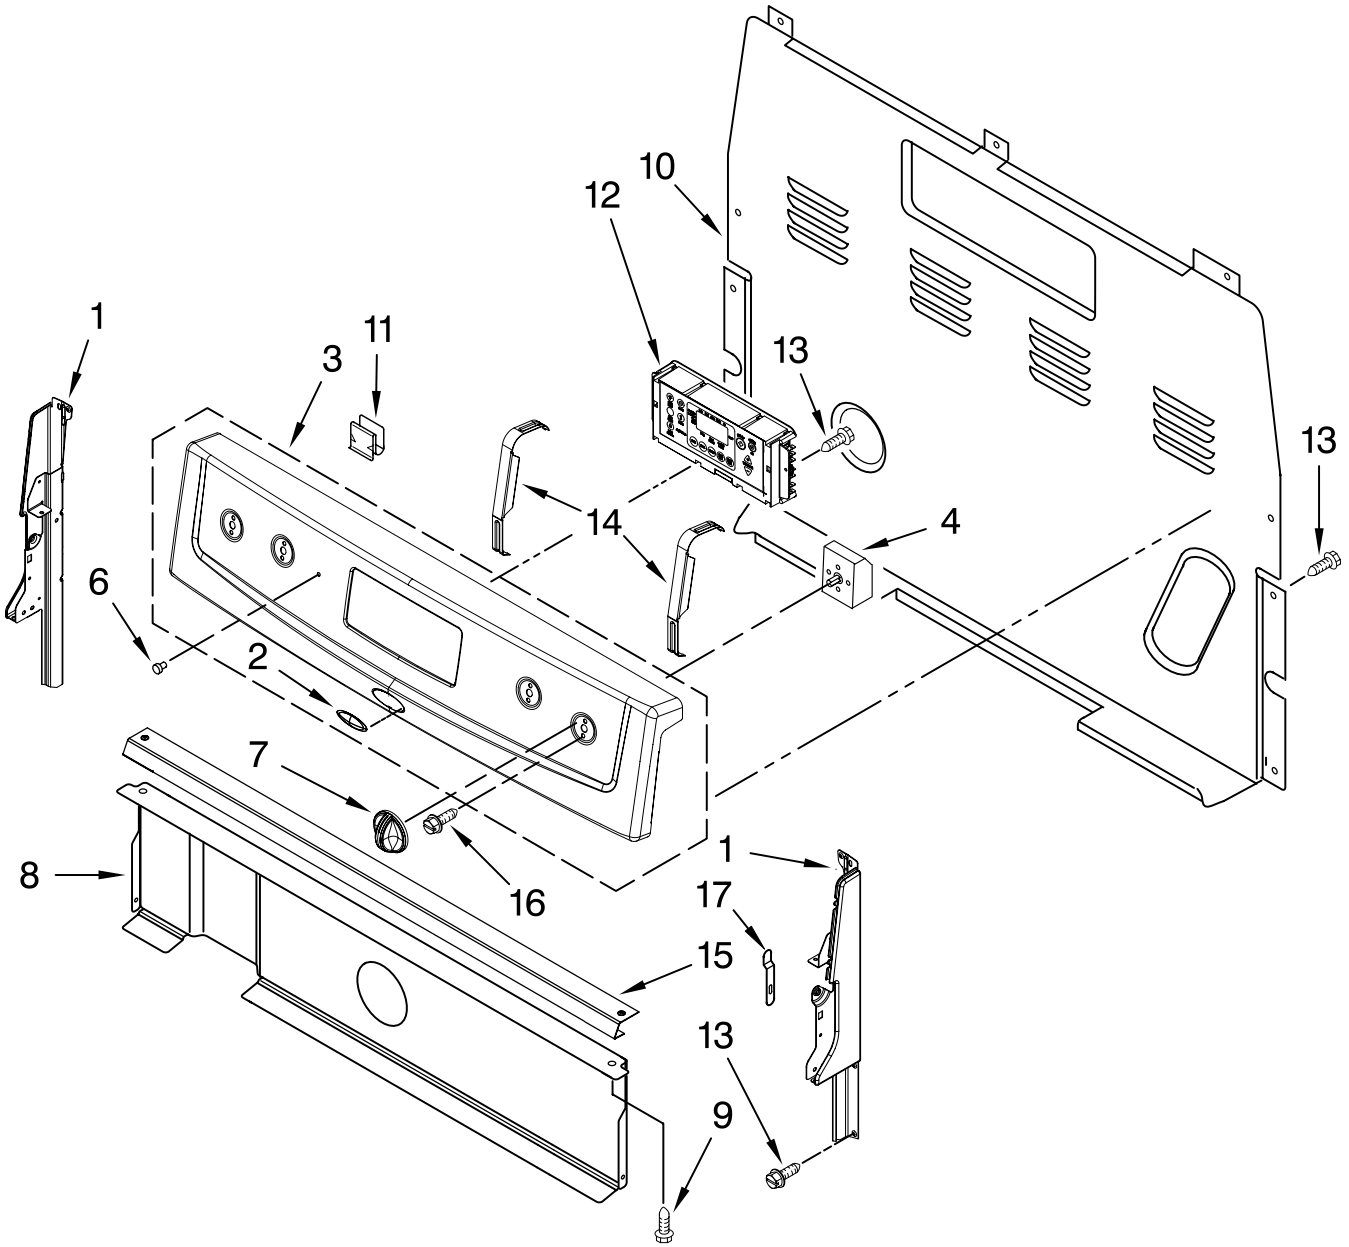


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

**For Model: RF212PXSQ4**
**(Designer White)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 9760407 | Brkt − Mounting |
| 3 | | Panel, Side (2) |
| | 8053830 | White−Textured |
| 4 | 7103P027-60 | Nut |
| 5 | W10129032 | Seal, Oven Door |
| 6 | 9757340 | Element, Broil |
| 7 | 9758541 | Element, Bake |
| 8 | 9761517 | Clip,Door Mntg(2) |
| 10 | W10114344 | Glide, Drawer Frnt |
| 11 | 3196037 | Foot, Front (2) |
| 12 | W10067840 | Screw |
| 13 | 8054068 | Tray, Insulation |
| 14 | W10137382 | Clip, Panel (6) |
| 15 | 9760314 | Rail, Base (2) |
| 16 | W10058460 | Foot, Rear (2) |
| 17 | 3196548 | Thermal, Fuse |
| 18 | 3196172 | Screw |
| 19 | 3186116 | Support, Oven (2) |
| 20 | 3186034 | Bracket, Service |
| 21 | 9761958 | Block, Terminal |
| 22 | 8274034 | Back, Main |
| 24 | 3196701 | Light Socket Assy |
| 25 | 311255 | Bulb, Oven Light |
| 26 | 9758701 | Spacer − Door |
| 27 | W10181986 | Sensor, Oven |
| 28 | 3196169 | Screw |
| 29 | 3196179 | Screw |
| 30 | 3196178 | Screw |
| 31 | 3400016 | Screw |
| 32 | 9758283 | Cover, Box |
| 34 | W10031780 | Screw |
| 35 | 3196566 | Screw |
| 36 | 3196174 | Screw |
| 37 | W10134285 | Flue |

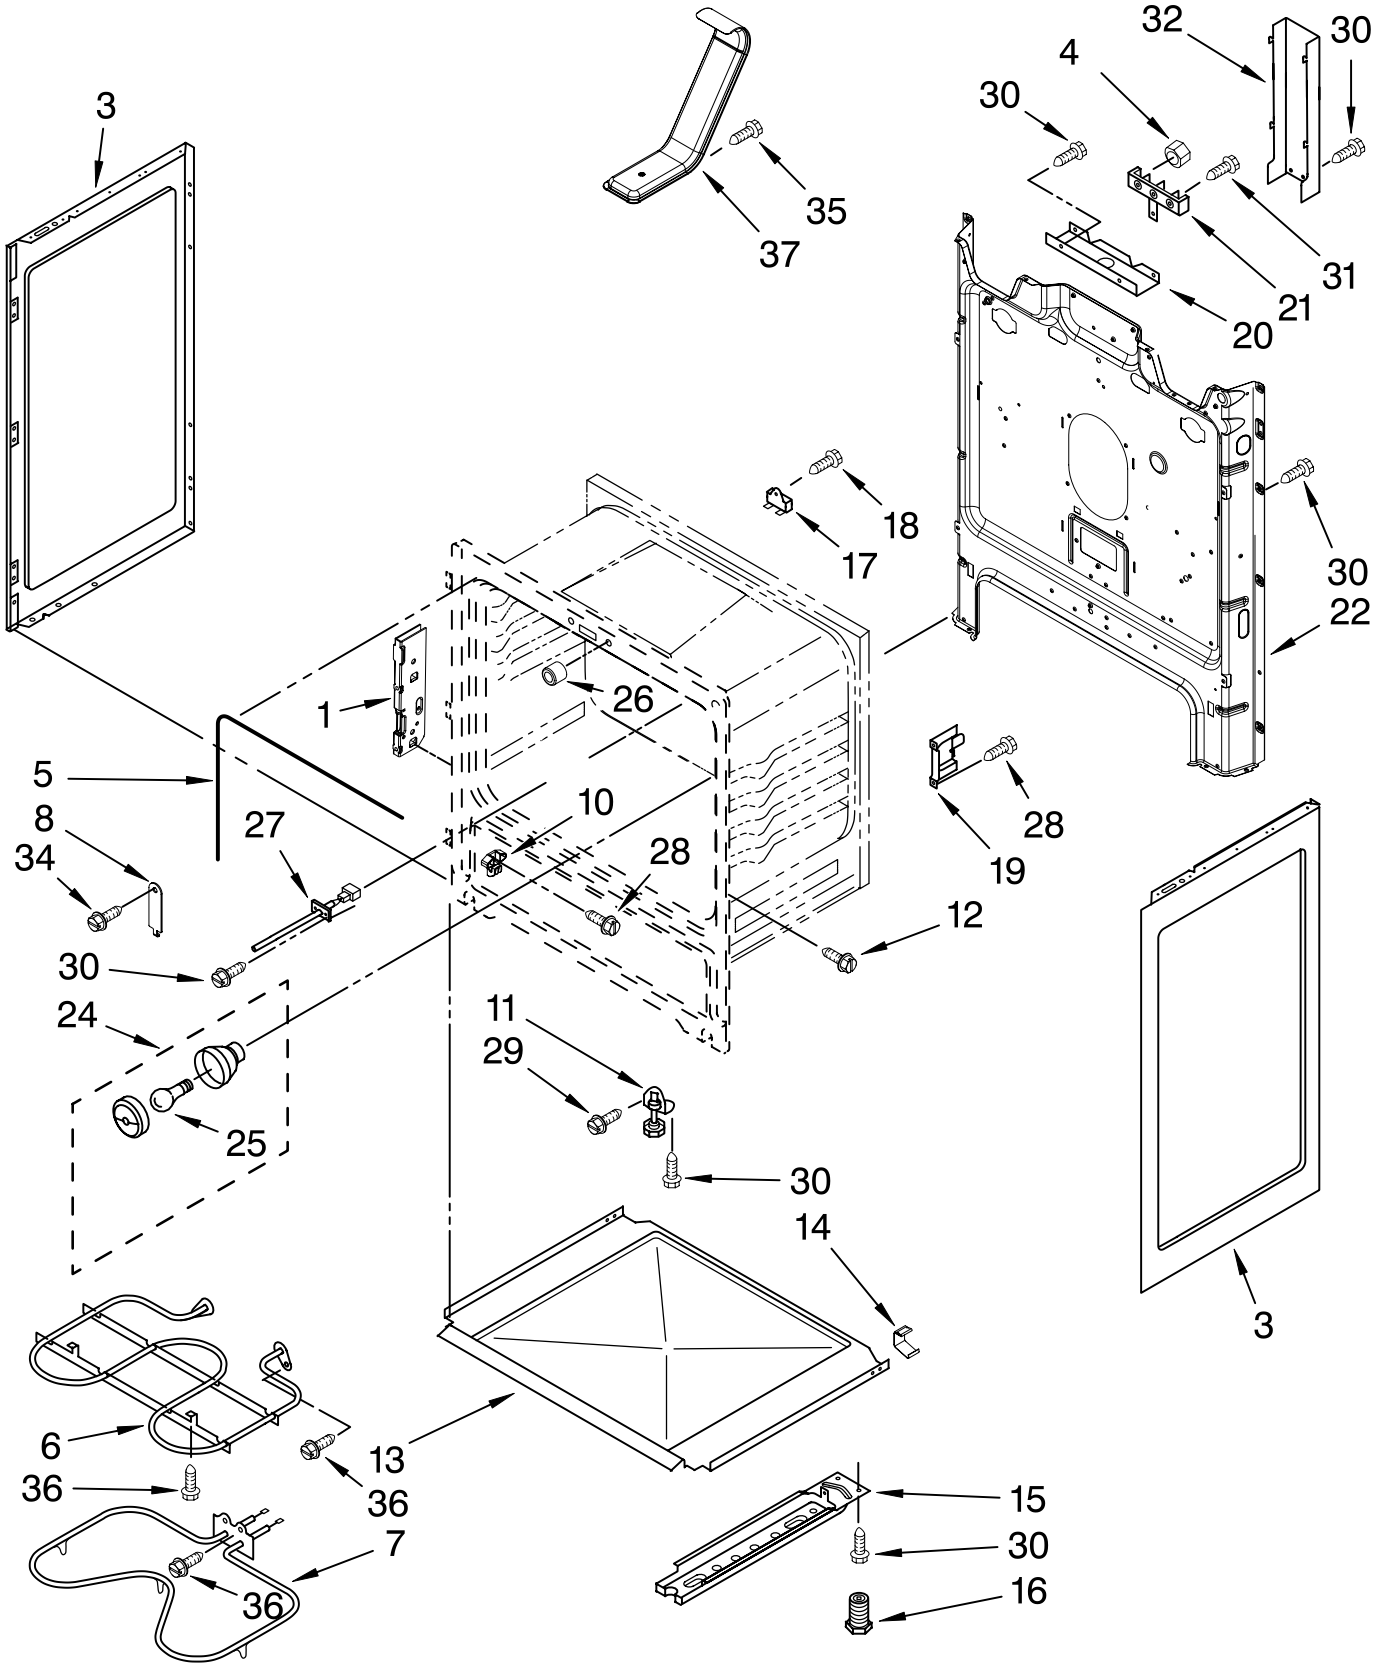**INSULATION**

| | |
|---|---|
| 8273263 | Insulation, Wrap |
| 8272611 | Insulation, Back |
| 8272613 | Insulation, Vent |

# DRAWER & BROILER PARTS

**For Model: RF212PXSQ4**
**(Designer White)**




| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | W10138079 | Rack, Oven (2) |
| 2 | 9761031 | Drawer, Storage |
| 3 | W10174396 | Bracket, Drawer(2) |
| 4 | | Rivet, Push (2) |
| | 3196814 | White |
| 5 | | Panel, Drawer Frnt |
| | 8053339 | White |
| 6 | 8053334 | Glide, Drawer (2) |
| 7 | 3196168 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

**For Model: RF212PXSQ4**
**(Designer White)**

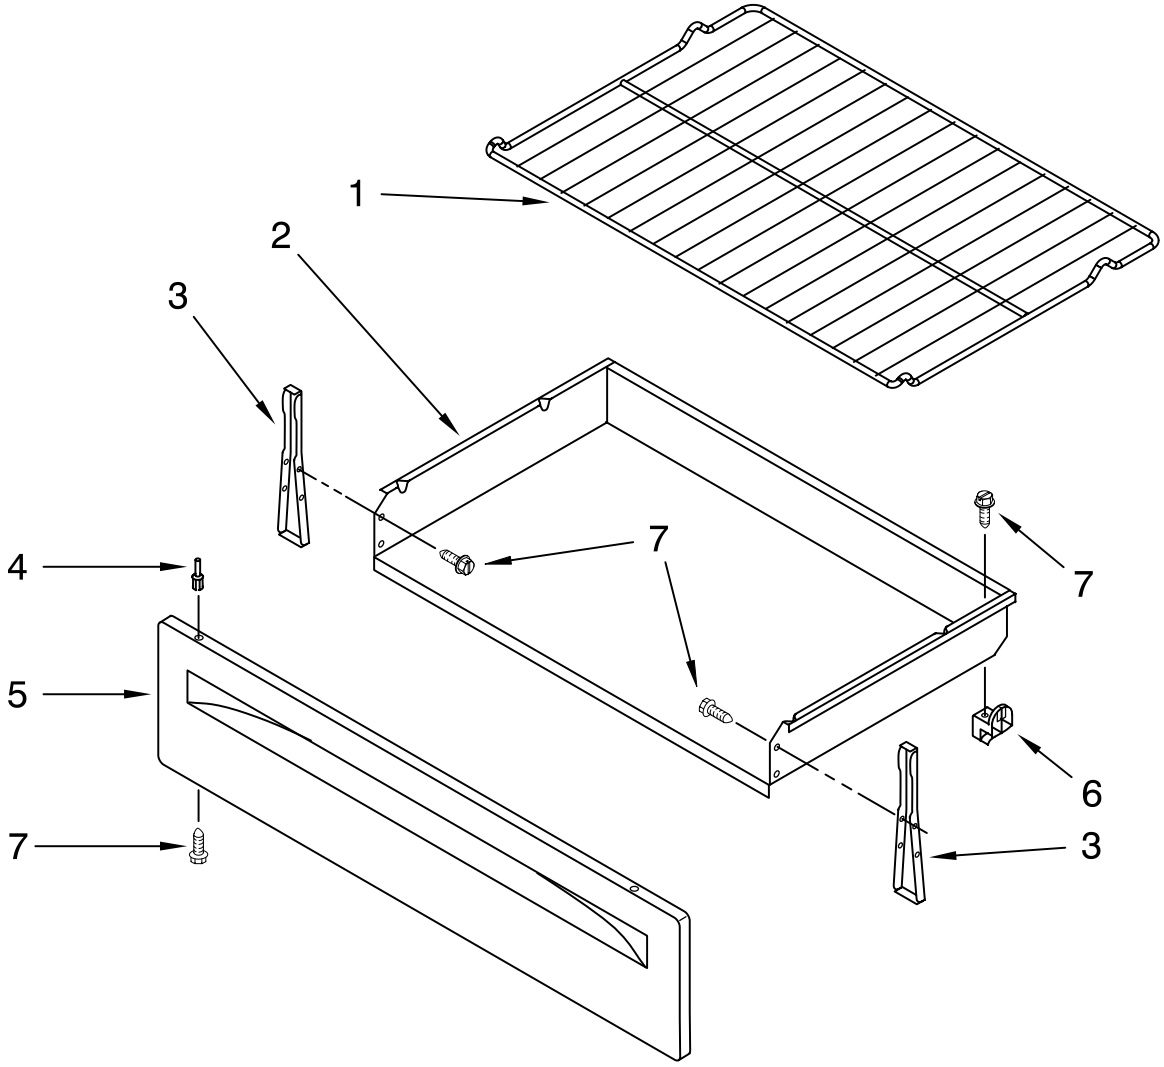


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Trim, Top |
| | W10144869 | White |
| 2 | W10178180 | Screw |
| 3 | | Handle, Door |
| | W10118384 | White |
| 4 | 9761340 | Liner, Door |
| 5 | W10168559 | Screw |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 6 | 9758163 | Window, Inner |
| 7 | 9761500 | Retainer, Insul. |
| 8 | 9761494 | Hinge, Door (2) |
| 9 | | Glass, Outer |
| | 9762476 | White |
| 10 | | Trim, Side |
| | 8523172 | White Left Hand |
| | 8523166 | White Right Hand |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 11 | 3196160 | Screw |
| 12 | | Trim, Lower |
| | 8523175 | White |
| 13 | W10113759 | Strap, Door |
| 14 | W10031780 | Screw |

# OPTIONAL PARTS (NOT INCLUDED)

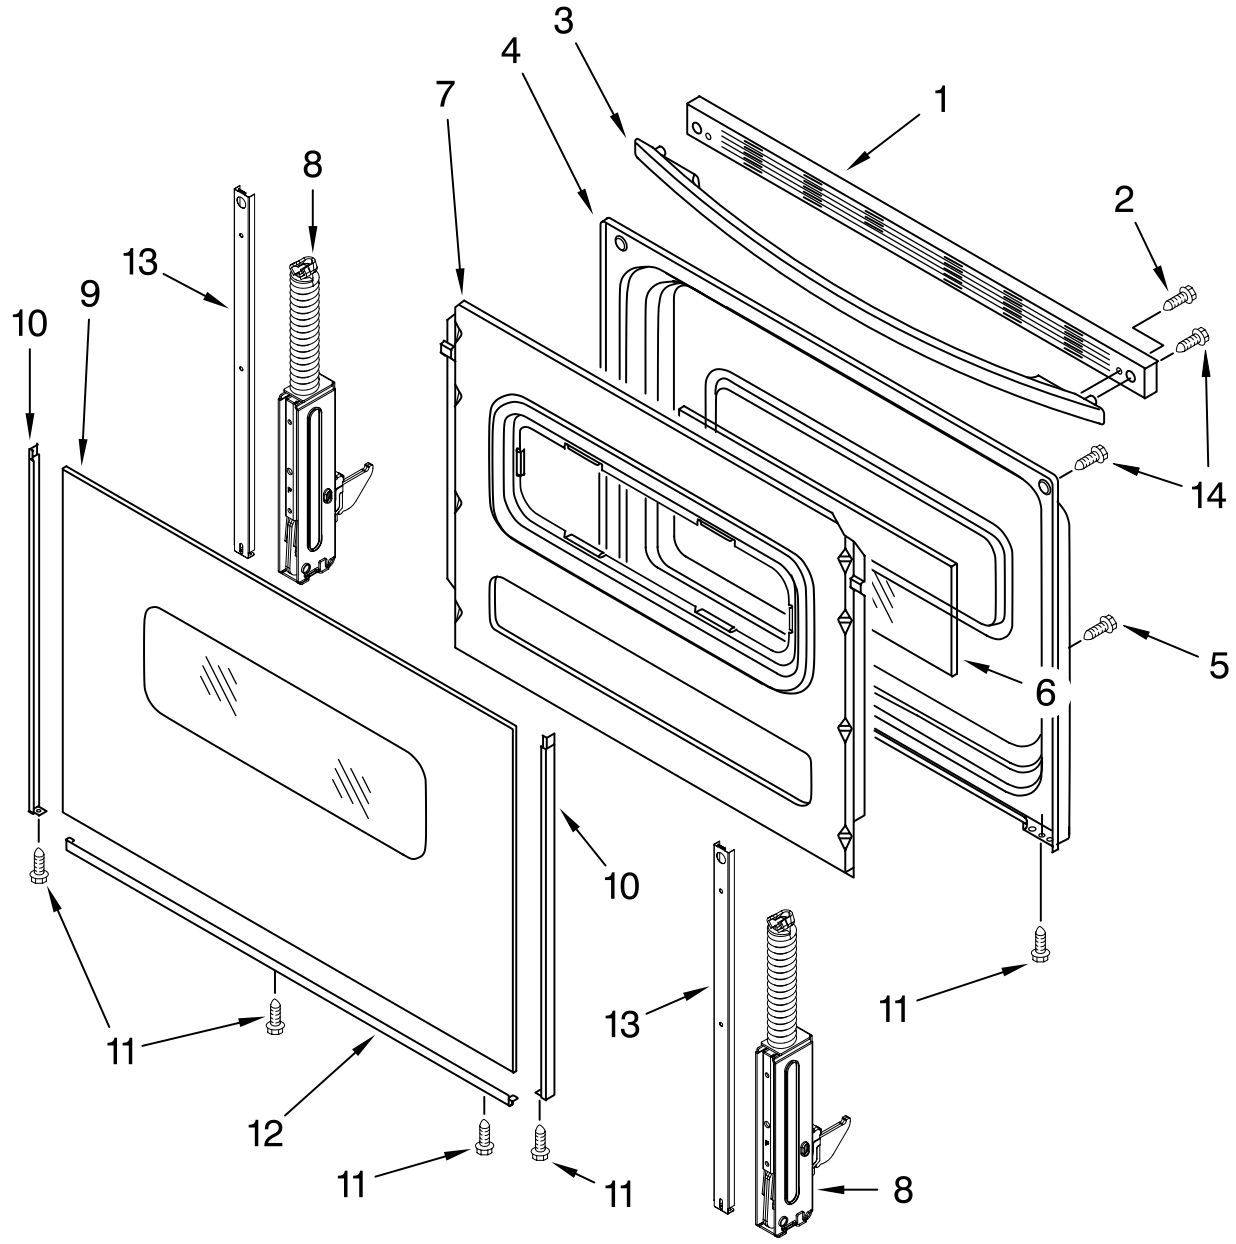**For Model: RF212PXSQ4**
**(Designer White)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|

Following Parts Not Illustrated

**SPLICING WIRES−−25FT. LENGTH**

| | |
|---|---|
| 242828 | Wire, Black 12 Ga. 150° c |
| 242821 | Wire, Blue 14 Ga. 150°c |
| 242822 | Wire, Brown 14 Ga. 150°c |
| 242830 | Wire, Brown 14 Ga. 200°c |
| 242823 | Wire, Green 14 Ga. 150°c |
| 242824 | Wire, Orange 14 Ga. 150°c |
| 242825 | Wire, Red 14 Ga. 150°c |
| 242831 | Wire, Red 14 Ga. 200°c |
| 242827 | Wire, Yellow 14 Ga. 150°c |

**REFINISHING MATERIAL**

| | |
|---|---|
| 799832 | Kit, Porcelain Repair (White) |
| 242756 | Touch−Up Self−Clean(1/2 Pt) |
| 261582 | Grease |

**INSULATION**

| | |
|---|---|
| 261514 | Insulation, Fiberglass (1−1/2" x 24" x 120") |
| 240132 | Insulation, Fiberglass (2−1/2" x 22" x 120") |

**PAINT, TOUCH−UP (1/2oz.)**

| | |
|---|---|
| 72017 | White |
| 72107 | Almond |
| 511873 | White Porcelain (2 Oz.) |

**PAINT, PRESSURIZED SPRAY (12 oz.)**

| | |
|---|---|
| 350930 | White |
| 350956 | Almond |
| 285006 | Superior Black |
| 206922 | Primer (White) |

**PAINT, BULK (1 qt.)**

| | |
|---|---|
| 799344 | White (Uncut) |
| 978883 | Almond (Uncut) |

**ACCESSORY PARTS**

| | |
|---|---|
| 241430 | Foil, Aluminum Oven (18" x 25') |
| 3191048 | Cleaner, Glass |

**ANTI−TIP KIT**

| | |
|---|---|
| W10017440 | Anti−Tip Kit |

**WIRING HARNESS PARTS**

| | |
|---|---|
| W10174432 | Harness, Wire (Cooktop Left) |
| W10174431 | Harness, Wire (Cooktop Right) |
| W10174459 | Harness, Wire (Sensor/Dr Switch) |
| 8523279 | Wire, Ground |
| 3196154 | Screw |
| W10174433 | Harness, Wire (Main) |
| W10144763 | Tie, Wire (Ceran Cktop) |
| 313660 | Clip, Wire Ground |
| 3196173 | Screw |
| 3196174 | Screw (Grnd Wire / Back) |